

Using Your Projector Remote & Computer Keyboard Shortcuts

Regardless of your projector's brand, its remote control is likely to have the following functions:

» **A/V Mute**

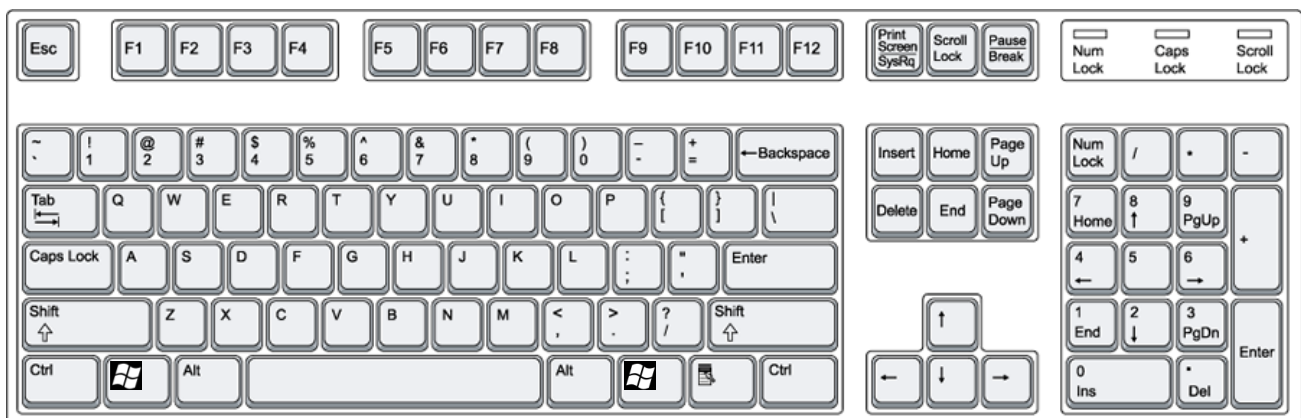
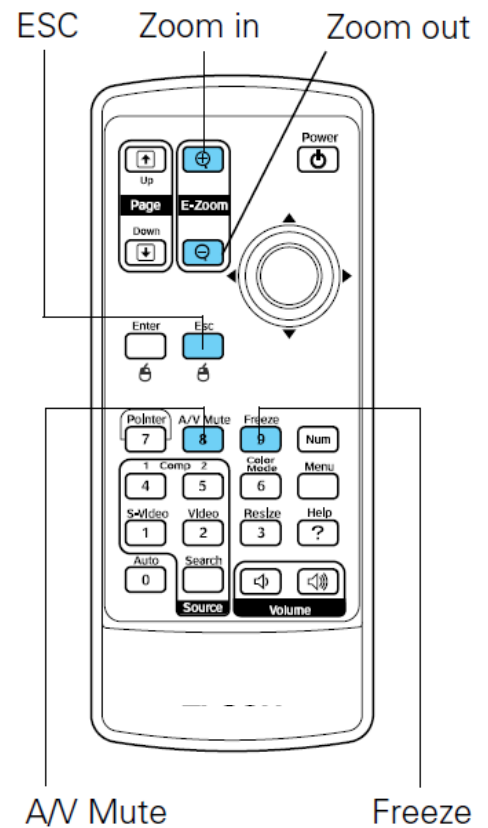
Use the Audio/Visual Mute button to display an opaque, black region. The A/V Mute button is a helpful alternative to powering the projector on and off. It can be used for short periods of time (approximately 20 minutes or less) and, in many cases, will help preserve the life of the projector's lamp.

» **Freeze**



Use the Freeze button to "freeze" an image, to-do list, writing prompt, etc. onto the screen or SMART Board™. The screen will remain "frozen" and continue to be projected, even if the computer user navigates to a new file or website. To disable this feature, press the Freeze button a second time.

» **Zoom in / Zoom out**

Use the Zoom in or Zoom out buttons to magnify a certain region being projected. These buttons can be used in conjunction with the "arrow pad" (circular compass) to highlight a specific image or area of text. **Please note: SMART™ interactivity is lost while the projector's lens is zoomed in or out.**



Four Frequently Overlooked Keyboard Shortcuts:

 + D	Alt + Tab keys	 + Tab	F11 key
Immediately shows the desktop and minimizes all applications	Press the Tab key to toggle between applications; release on icon of choice	Press the Tab key to toggle between items on the task bar; release on icon of choice	Provides a full-screen view when viewing web pages; press again to restore view